





7. Press **1/2 Button** to switch to **Channel 1**, and then press **MODE Button** to switch to **Vibration Mode** ( icon will show on the LCD display).
8. Press **Up/Down Button** to select a vibration level, and then press **Y Button**, the receiver will vibrate.
9. **For SP 209**, press **1/2 Button** to switch to **Channel 2**, and then press **MODE Button** to switch to **Vibration Mode** ( icon will show on the LCD display).
10. Press **Up/Down Button** to select a vibration level, and then press **Y Button**, the receiver will vibrate.

NOTE:

- **Please always install the transmitter's battery BEFORE install the Re batteries of receivers. As it is a wireless training system, the transmitter has to be power on then the receiver will be able to receive the code from transmitter.**

Step 3: Install the Electrodes for Receivers

Randomly pick on pair of electrodes and screw them on receivers. (Please pick the same size electrodes for each receiver)

Step 4: Adjust the collar to fit your pet

To ensure a proper fit, please follow the steps below:


1. Put the straps on the receiver.
2. With your dog **standing**, centre the collar receiver where contact points are underneath your pet's neck, touching the skin.
3. The collar receiver should fit snugly, yet loose enough to allow on finger to fit between the strap and your dog's neck. If the strap is too long for your dog, cut off the excess length.
4. Allow your dog to wear the collar for several minutes and then recheck the fit. Check the fit again as your dog becomes more comfortable wearing the collar receiver.

We would recommend you to use the Tone Function before starting static shock and always start with the lowest level of static shock.



How to check the static shock function

1. Use the **Test Light** attach on the both side of Electrodes (Metal).
2. Press the **MODE Button** to switch to **Shock Mode**, and then press the **Up/Down Button** to select a shock level.
3. Press **Y Button**, the **Test Light** will blink or stay on.

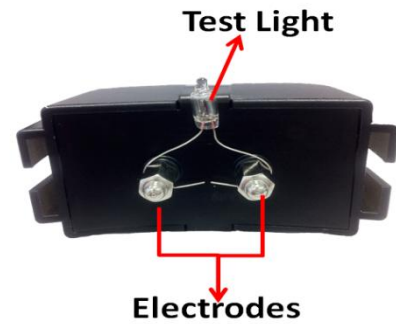

How to change the batteries

- Please replace the transmitter's battery when the Battery Exhaustion icon shows on the LCD display.
- Please replace the receiver's batteries when the Green Indicated Light does not light up on the receiver.

Important Tips

1. The **valid distance of remote control** means the **straight-line distance between the transmitter and the receiver without obstacles in between. If there are interference signals or signal screening around, the actual remote control distance may vary.**
2. The **life time of the batteries vary** according as how often you use the product. **Your first battery may not last as long as your expect.**
3. This product is for pet training. **Good effect can only be achieved after a period of training**
4. This product is a wireless transmitting device. **You MUST NOT use the remote control system in places like petrol stations or hospitals where mobile phones are prohibited. Patients using heart pacemaker are forbidden to use this product. If some products have the same frequency as this product, the receiver might not work correctly.**
5. The **Electrodes have to directly touch pet's skin as it is very important to effective training.**
6. This product is only for Pet Training, **It is not a Regular Pet Collar. Please remove it from your pet at least 8 hours out of every 24 hours**
7. **The device does not design for waterproof.**
8. **If you do not use the transmitter or receiver please take the batteries out for saving battery life.**



Customer Support Center

Tel: 1-909-923-8743

Monday – Friday 8:30AM – 5:00 PM Pacific Time

Email: qpets@lavasat.com

Add: LAVA Electronics Inc.

2580 E Philadelphia ST #D

Ontario, CA 91761

This product has a limited Manufacturer Warranty. Details of the warranty can be found on www.lavasat.com or by calling our Customer Care Center.





LAVA Electronics Inc
2580 E Philadelphia St #D
Ontario, CA 91761, USA
1-909-923-8743

www.lavasat.com

Email: qpets@lavasat.com

Copyright © LAVA Electronics Inc. 2010. All rights reserved.